


1. Input `*#123312#`




2. Select Audio

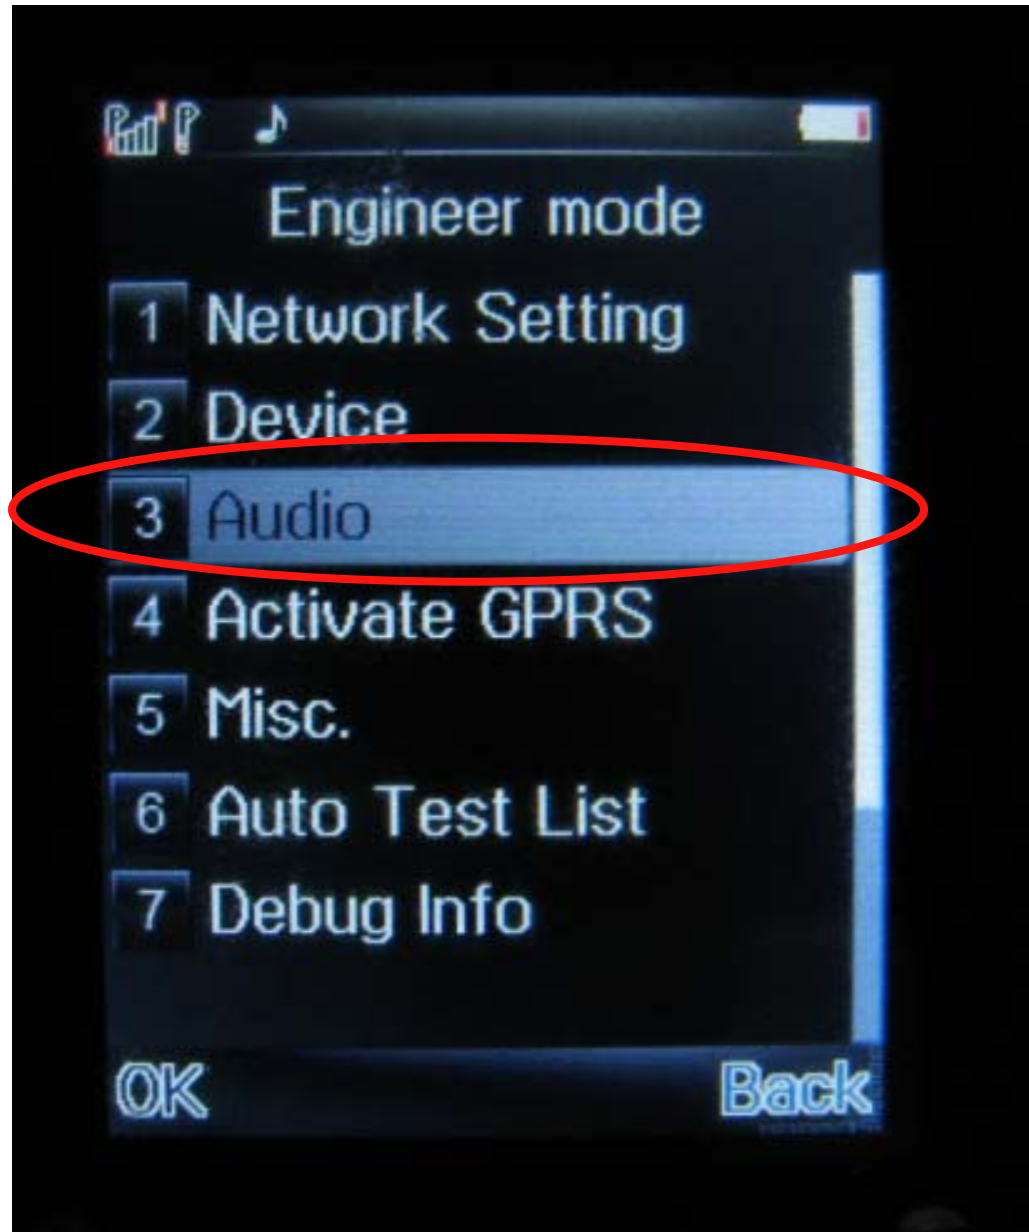

3. Select Normal mode




4. Select Speech

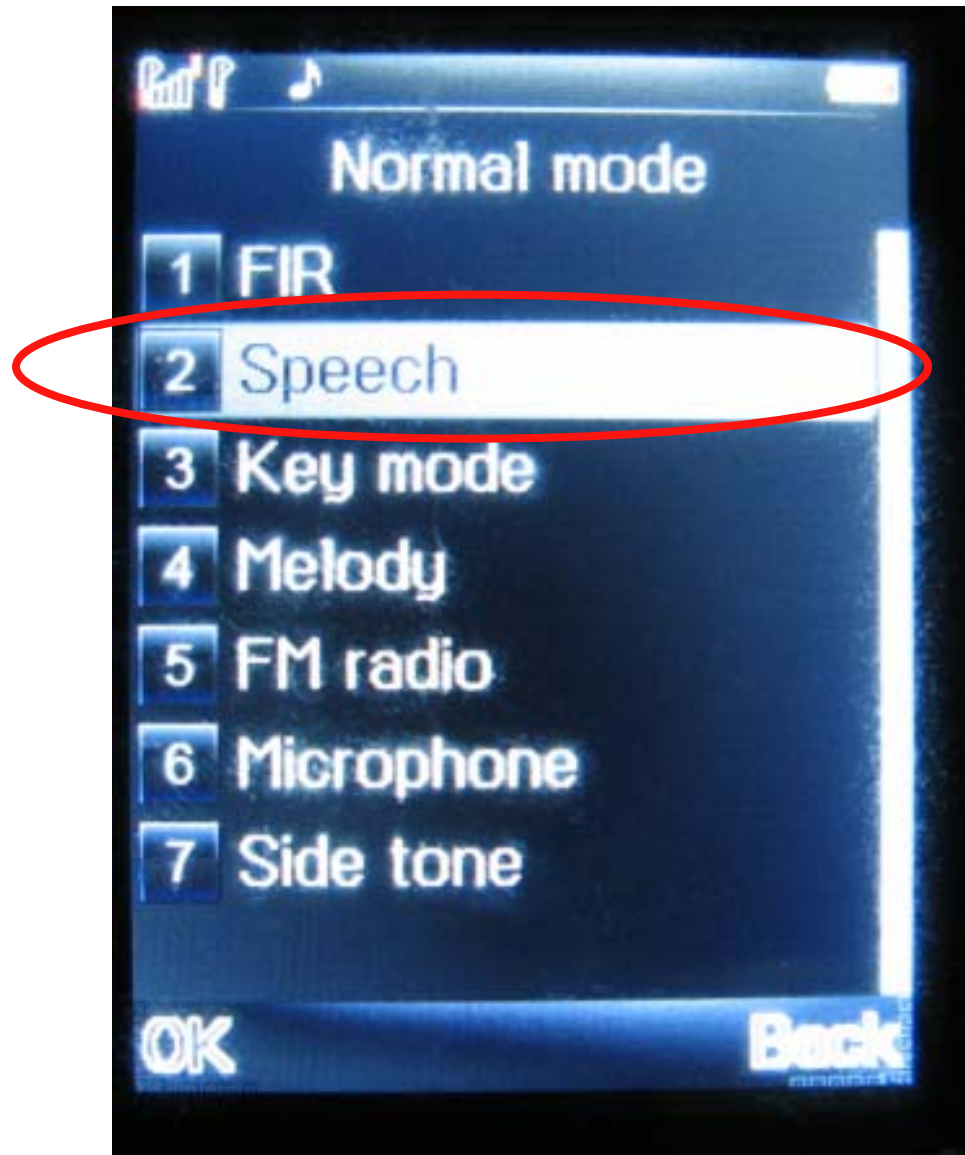



5. We can see Volume 0 ~6 in speech menu





6. Select Volume 6 first.

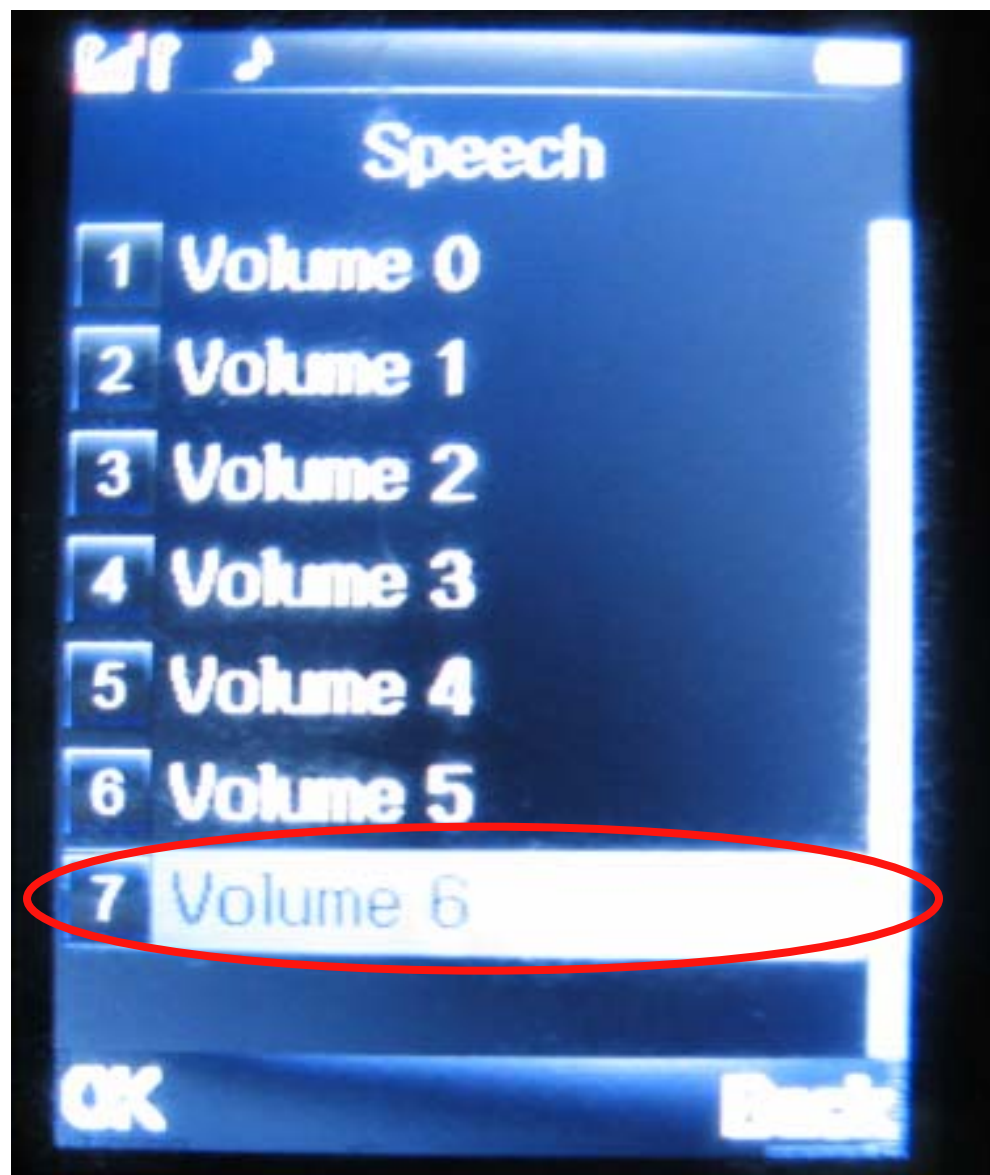



7. Adjust volume 6 by up navigation key from 176 to 252, and then press settings to save it.

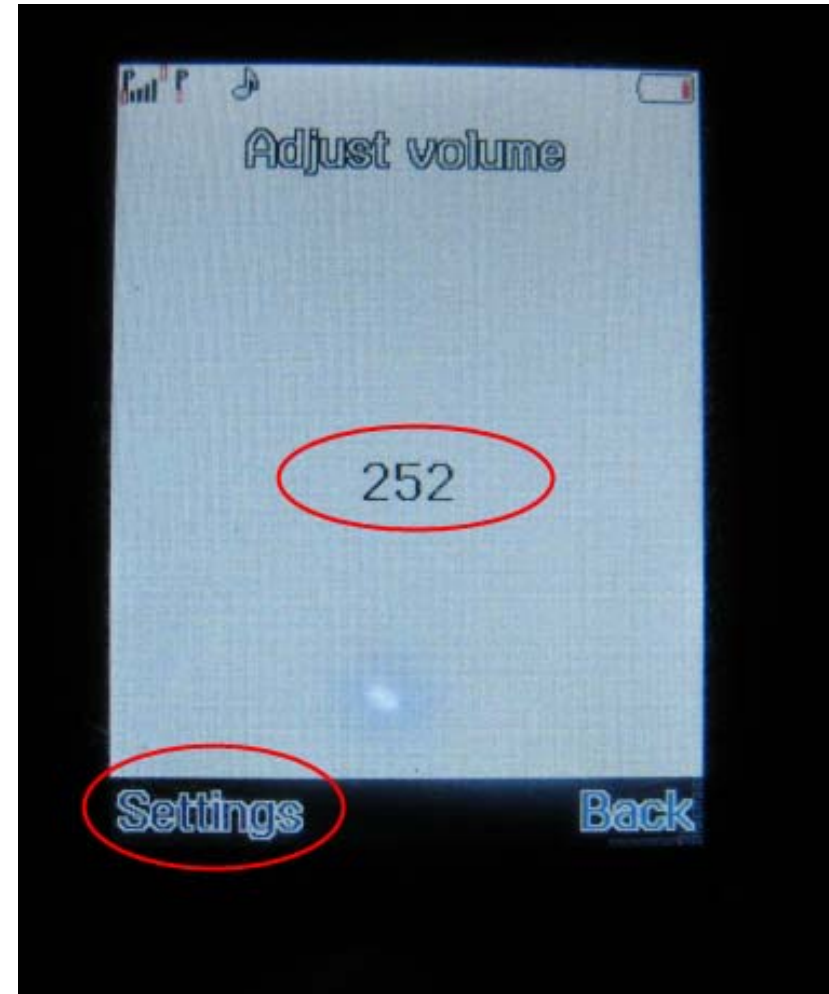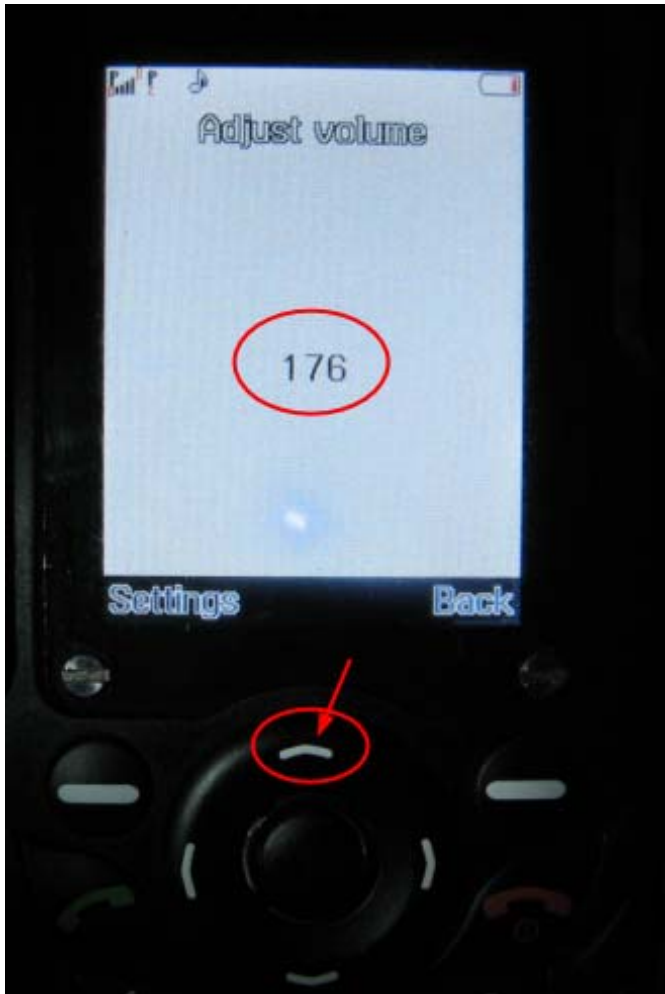


8. Change volume 5 to 240 and press settings to save it.

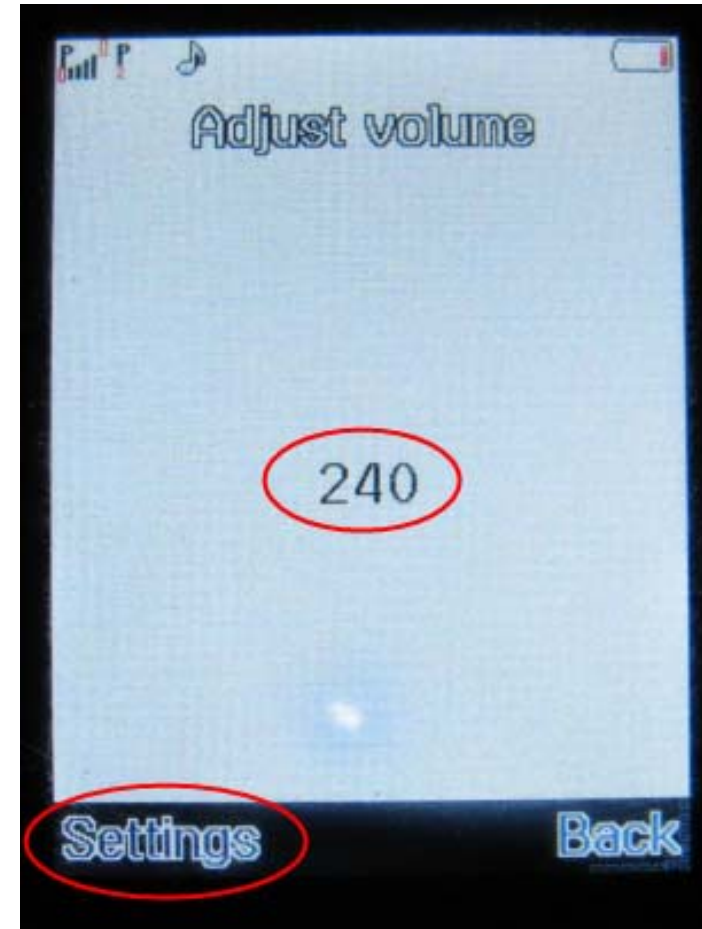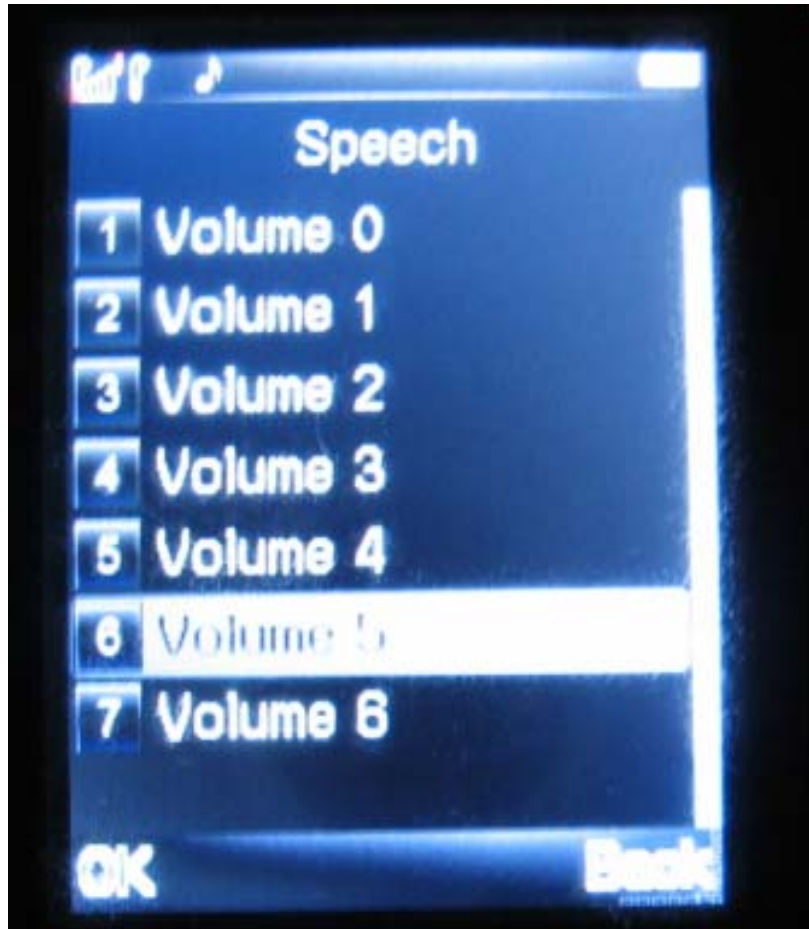




9. Change volume 4 to 220 and press settings to save it.

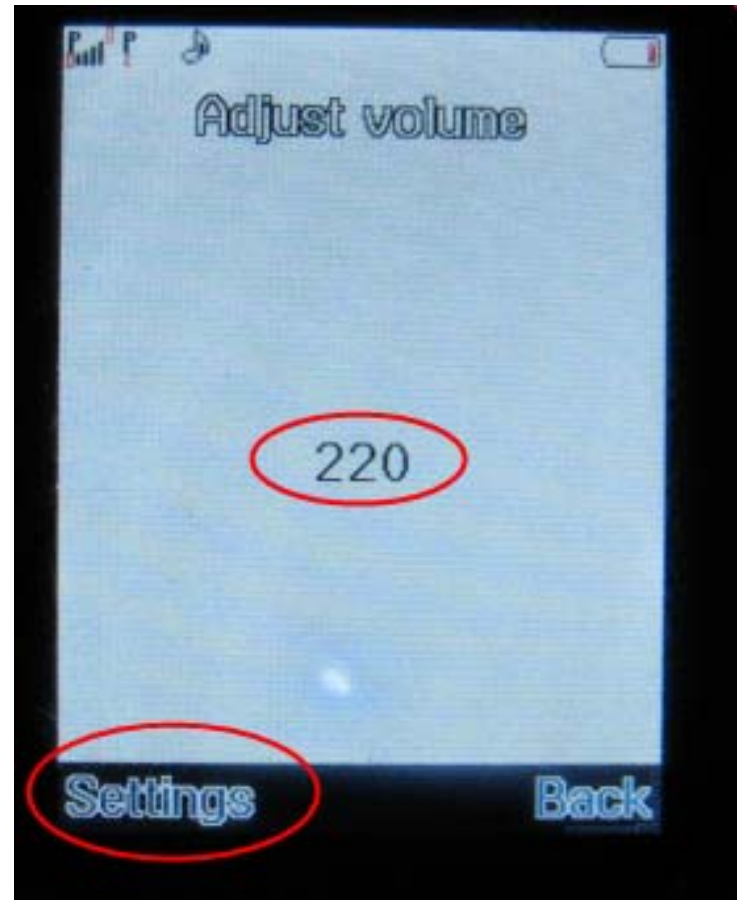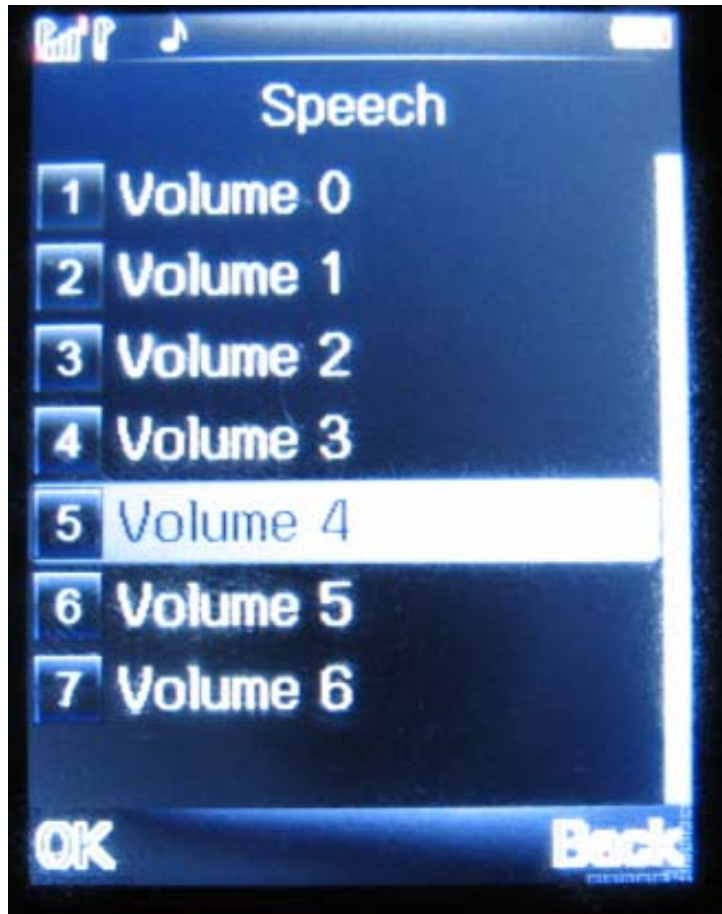



10. Change volume 3 to 204 and press settings to save it.

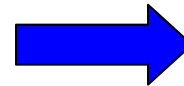




11. Change volume 2 to 192 and press settings to save it.

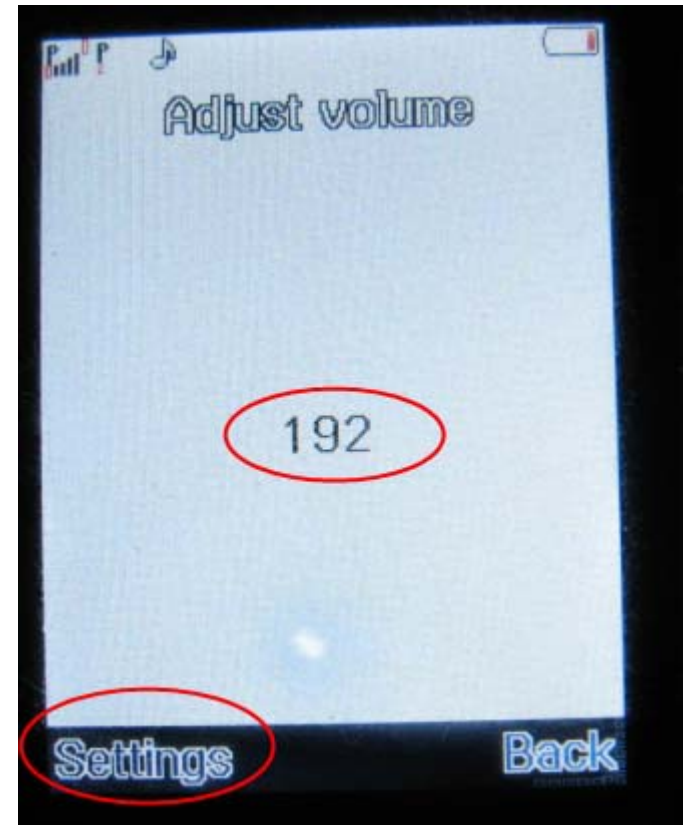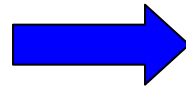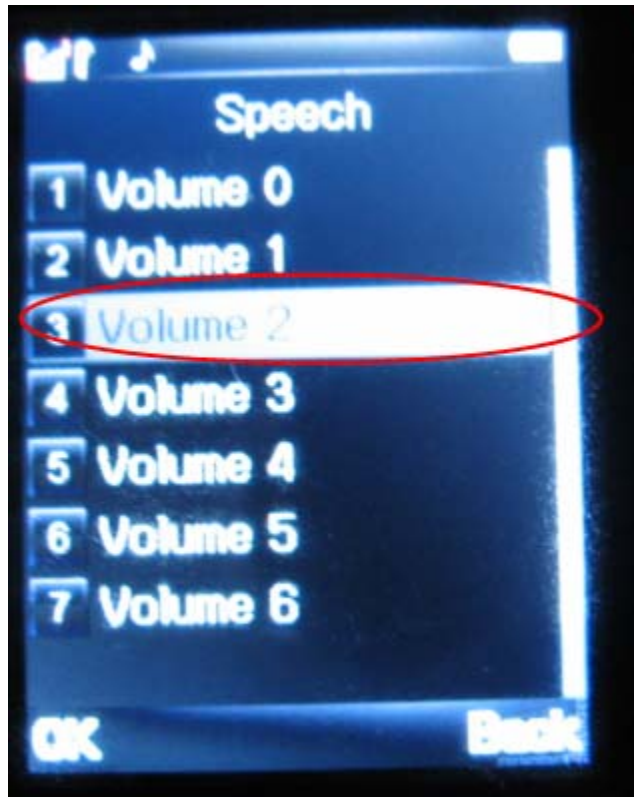

12. Change volume 1 to 160 and press settings to save it.

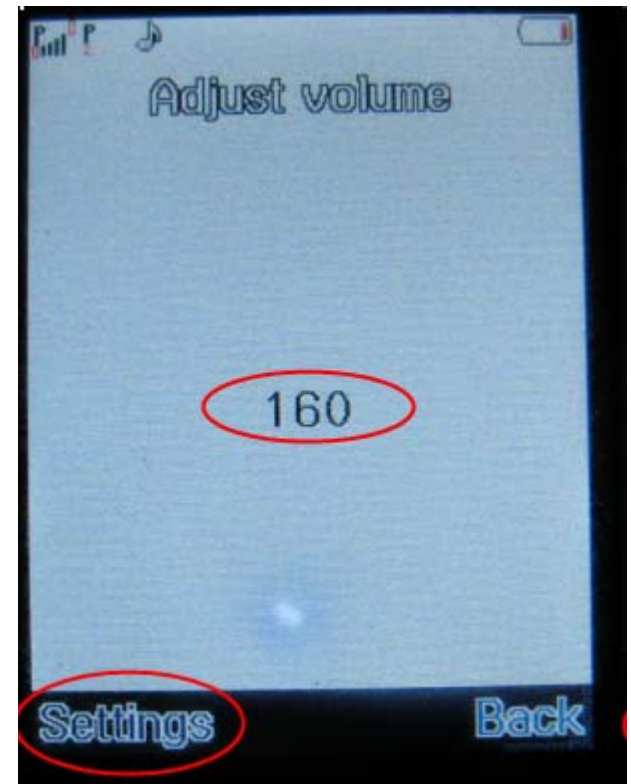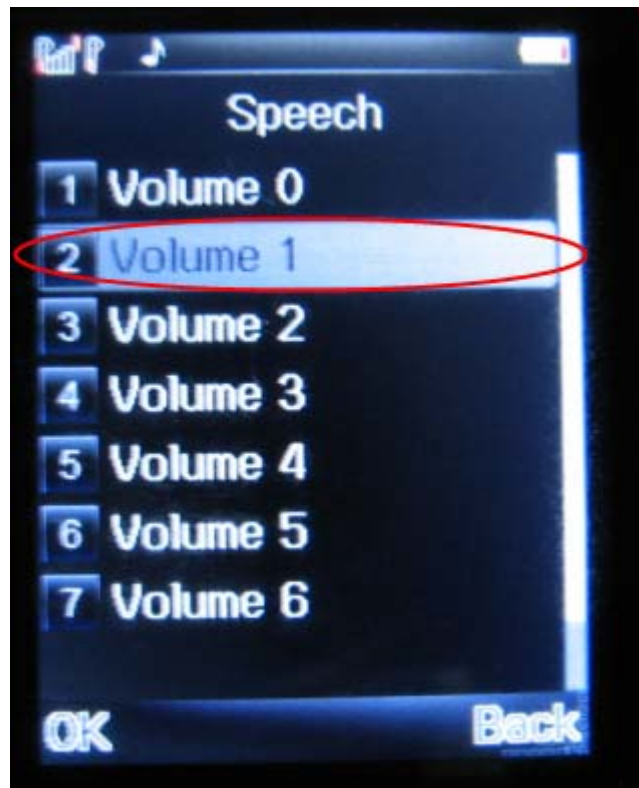



13. Change volume 0 to 108 and press settings to save it.

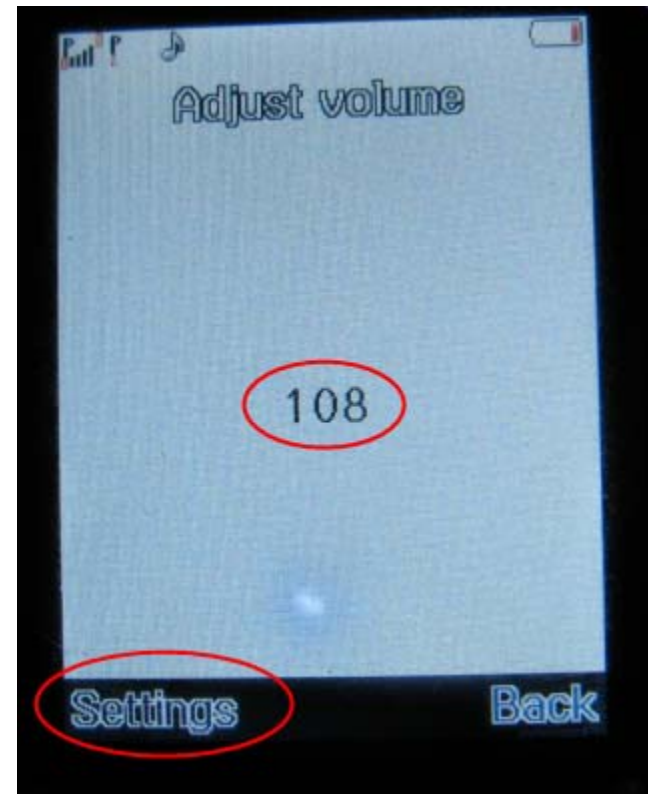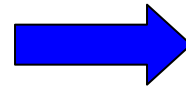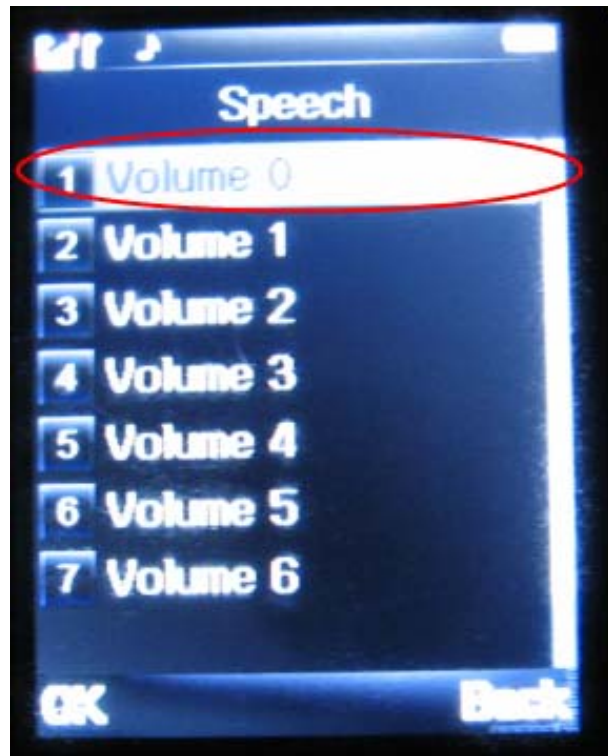


14. Select Microphone menu. (under normal mode menu)




15. Set Volume 0~6 to 236. (All seven volume are same)

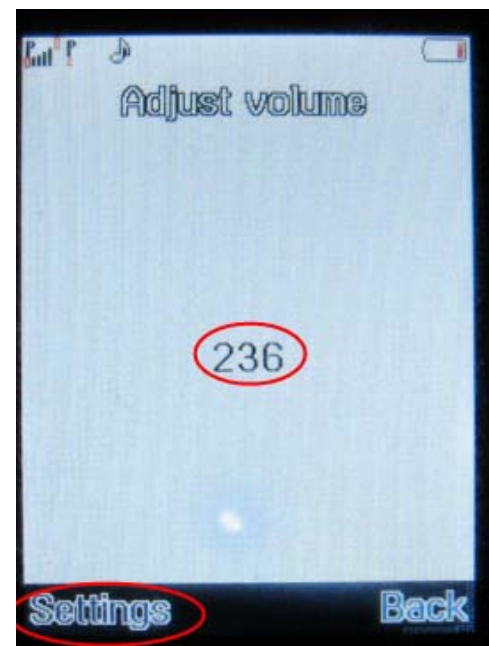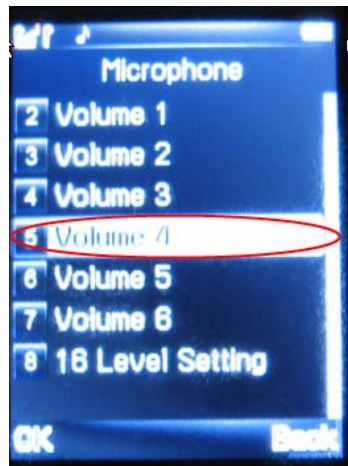

16. After set Microphone and speech. Please press Back

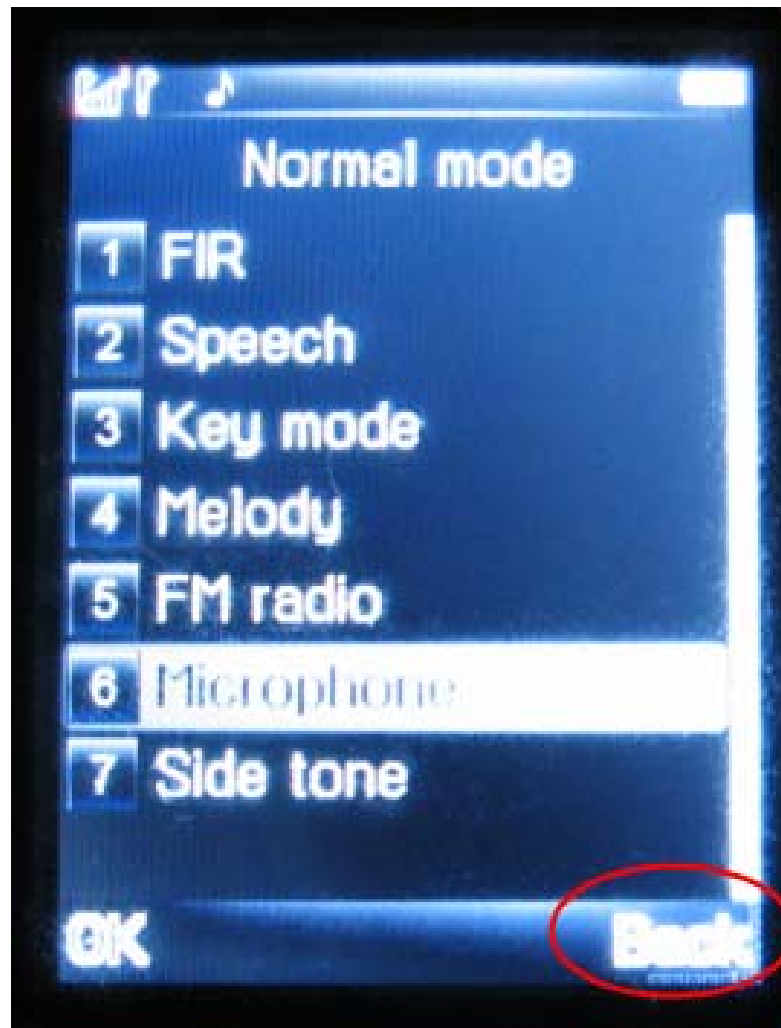

17. It will show “Update parameter?”, please press yes to save it.

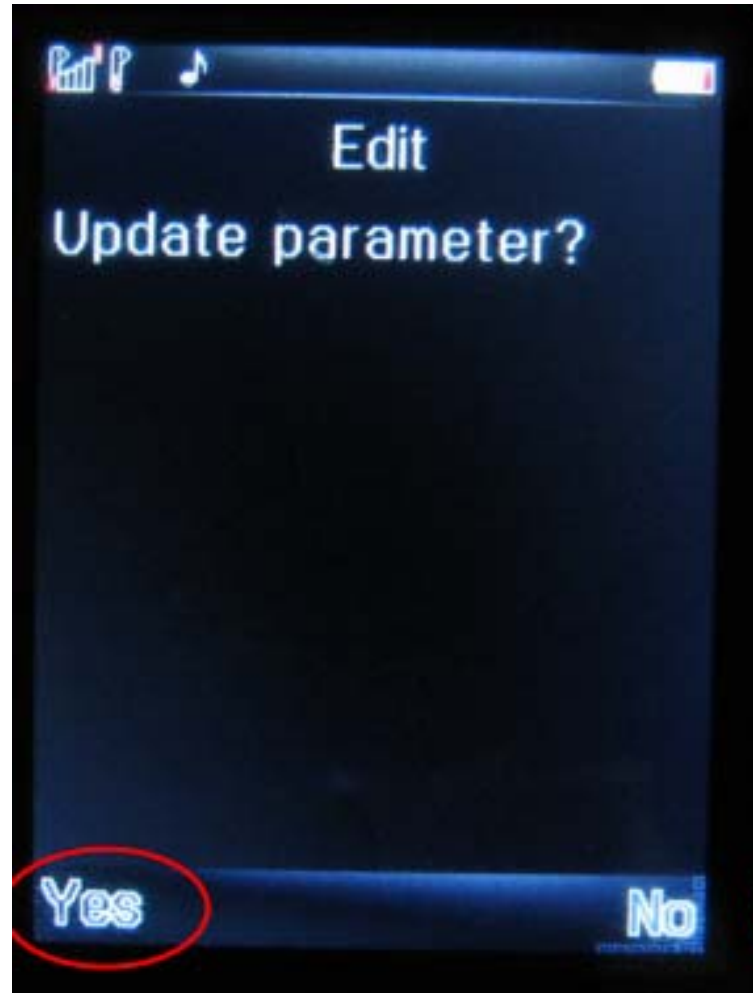

18. After adjust the parameters, the receiver and microphone's volume will be loudly.